

i.Dream
i.Dream America Inc.

innovative station for your iPod



USER MANUAL

I.DREAM AMERICA INC. ONE YEAR LIMITED WARRANTY

What Does The Warranty Cover?: i.Dream America Inc. warrants that its products shall be free from defects in materials or workmanship with the exceptions stated below.

What is The Period Of Coverage?: This warranty runs for one year from the date of purchase. The term of any warranties implied by law shall expire when your limited warranty expires.

What Does The Warranty Not Cover?: This warranty does not cover any defect, malfunction or failure that occurs as a result of improper installation, misuse or failure to follow the product directions; abuse; or use with improper, unintended or faulty equipment. Also consequential and incidental damages are not recoverable under this warranty.

What Will i.Dream America Inc. Do To Correct The Problem?: i.Dream America Inc. will, at its option, repair or replace any product that proves to be defective in material or workmanship. If your product is no longer being manufactured, or is out of stock, at its option, i.Dream America Inc. may replace your product with similar or better i.Dream America product.

How To Get Warranty Service?: To get a covered product repaired or replaced, you must contact i.Dream America during the warranty period by email (support@idreamusa.net). You must include in your email, your name, address, email address, telephone number, product name, model number, product serial number, date of purchase and a complete description of the problem you are experiencing. If you like to contact us by phone during our normal business hours 9am to 5pm P.S.T., you may find our support contact number at our website (www.idreamusa.net) . Return shipment is at customer expense with proper package to avoid damage during shipment. The shipment should be insured for possible damage or loss, and must be accompanied by the original proof of purchase.

Customer Support

The answer for most setup and performance questions can be found in the Troubleshooting guide. You can also contact i.Dream America Support Team by sending email at support@idreamusa.net or call the support team. The contact numbers can be found at www.idreamusa.net.

STATEMENT OF FCC COMPLIANCE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver .
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

BOX CONTENTS

- "i-Classic" speaker system with detachable pair of speakers
- Remote control
- Battery CR2032 for remote control
- 3 audio cables (2 pieces for speakers, 1 piece for line in)
- Power Supply

- Interchangeable Universal Docks (7 pieces)

Made For:

All current iPod's current models except iPod Shuffle

Buttons and Jacks View:



DESCRIPTION OF SPEAKER SYSTEM JACKS

- **DC:** for connecting to power supply
- **PHONE:** for connecting to headphone (not supplied)
- **LINE IN:** for connecting to external audio source
- **S-VIDEO:** for connecting to television
- **SPEAKER:** for connecting to supplied pair of speakers

DESCRIPTION OF SPEAKER SYSTEM BUTTONS

- **POWER:** turn on / off the unit
- **ALARM ON/OFF:** turn on / off the alarm
- **SET:** enter setting mode / save radio preset station
- **SLEEP:** select power on period
- **RADIO/BAND:** select radio band
- **PRESET:** select radio preset channel
- **SNOOZE/LIGHT:** for snooze function / exit the setting mode / turn on or off display backlight and decorative lights
- **VOLUME + / -:** adjust volume level up / down
- **PLAY/PAUSE:** to play iPod® / to pause iPod®
- **TUNING + / -:** for radio tuning up or down / for iPod® forward skip/searching or for backward skip/searching

DESCRIPTION OF REMOTE CONTROL

- **POWER:** turn on / off the unit
- **TUNING + / -:** for radio tuning up or down / for iPod® forward skip/searching or for backward skip/searching
- **VOLUME + / -:** adjust volume level up / down
- **PLAY/PAUSE:** to play iPod® / to pause iPod®
- **SET:** enter setting mode / save radio preset station
- **PRESET:** select radio preset channel
- **SLEEP:** select power on period
- **FUNCTION:** select operation mode

INSTALLATION

The “i-Classic” speaker system can be installed with speakers attached or detached to the unit. There is no need for speakers wires connection while the speakers are connected to the system. You will need to connect the speakers wires when the speakers are detached to the unit for the speaker to work.

- Detach the speakers from unit by sliding the latch away from the speaker and lift the back of the speaker up and remove the speaker. Connect the supplied speakers wires with one end to back of the speakers and the other end to the speakers jacks on the unit.
- Attach the speaker to the unit by putting the front of the speaker into the area and place the back down while sliding the latch away from the unit
- Connecting jack of the power supply to the unit before plug into the wall outlet. Plug the power supply into the wall outlet.

LISTENING TO iPod

1. Insert a suitable Universal Dock onto the holder
2. Insert the iPod® into the connector
3. Once the iPod is placed in connector, the unit will charge the iPod until it is full.
NOTE: when the iPod® is inserted into the dock, whether the unit is on or off, the iPod is charged until it is full.
4. Press “PLAY/PAUSE” button to start playing.
5. To listen through headphone, plug in headphone plug into the PHONES jack of the unit. The speakers will be off when headphone are plugged in.
6. Adjust volume through the unit or remote for desire volume level.

PAUSE iPod® PLAYBACK

Press “PLAY/PAUSE” button to pause / resume iPod® playback.

SKIP / SEARCH FUNCTION

Press TUNING +/- button to skip to desired the song.

Press and hold TUNING +/- button for forward or backward search.

S-VIDEO OUTPUT

If the iPod® has photo/video capability, and your TV has S-Video input, connect the unit to the external TV with an S-Video cable (not included). The photos/videos from iPod® can be viewed on your external TV.

NOTES:

Make sure the power of unit and TV are off before making any connection

Make sure to go into the setting menu of your iPod® and set the TV Out to ON, otherwise, the photos/videos from iPod® cannot be viewed on your external TV.

Listening to the radio

1. Press the RADIO/BAND button to activate the radio.
2. If necessary press the RADIO/BAND button again to select AM or FM band.
3. Press the TUNING +/- button to tune to desired station.
4. Automatic Tuning:
 - Press and hold the TUNING +/- button until the display starts to scan, and then release the button.
 - The tuner will stop on the first strong station it finds.
 - Repeat this procedure until the desired frequency appears in the display
5. Manual Tuning:
 - Repeatedly press the TUNING +/- button to manually move the display up or down until you reach the frequency of the desired station.

NOTES:

Use manual tuning to select weaker stations that might be bypassed during automatic tuning.

If the automatic tuning does not stop on the exact frequency of the station, for example it stops on 100.85 MHz instead of 100.8 MHz, use the manual tuning method to "fine tune" to the exact frequency of the desired station.

6. PRESET RADIO STATIONS

The unit allows you to store up to 10 AM and 10 FM stations in the tuner preset memories for easy recall at any time.

- Press the RADIO/BAND button to activate the radio.
- Press the RADIO/BAND button again to select AM or FM band.
- Tune to desired radio station using TUNING +/- button.
- Press the memory SET button once, preset channel number 01 will appear on display.
- Use PRESET buttons to select desired preset channel number.
- Press SET button again to confirm storage of setting.

LISTENING TO LINE INPUT

- Plug the audio cable into the audio output jack of your auxiliary device and the other end into the LINE IN jack of the unit.
- The sound of the auxiliary device will be heard through the unit's speaker.
- If the unit is in a mode other than LINE IN, press FUNCTION button of the remote to select LINE IN mode.

CLOCK SETTING

TO SET TIME

Press SET button twice, the display will flash.

Press VOLUME +/- button to set advance or reverse the hour.

Press TUNING +/- button to set advance or reverse the minute.

Press SNOOZE/LIGHT button to save entries or just wait for around 5 seconds to exit setting mode.

TO SET ALARM

Press SET button once, and the display will flash.

Press VOLUME +/- button to set advance or reverse the hour.

Press TUNING +/- button to set advance or reverse the minute.

Press PRESET button to select the alarm sound source (iPod®, RADIO or BUZZER).

Press SNOOZE/LIGHT button to save entries or just wait for around 5 seconds to exit setting mode.

Press the ALM ON/OFF button to switch on the daily alarm, a ALARM icon will appear on the display.

ALARM TO BUZZER

Buzzer sound will alarm for one hour.

You may also activate the Snooze function manually after the alarm sounds by pressing the SNOOZE button.

The buzzer stops for around 9 minutes and then comes on again.

This operation can be repeated 3 times. After the Fourth time the alarm shuts off until the next day.

After the buzzer sounds you may also press the ALARM ON / OFF button to stop it immediately. It will reset itself for the following day.

ALARM TO RADIO

At the desired wake up time, the radio turns on.

It will play for 1 hour and then shuts off and resets itself for the following day.

You may also activate the Snooze function manually after the alarm sounds by pressing the SNOOZE button.

The radio turns off for around 9 minutes and then turns on again.

This operation can be repeated 3 times. After the Fourth time the alarm shuts off until the next day

After the radio sounds you may also press the ALARM ON / OFF button to stop it immediately. It will reset itself for the following day.

ALARM TO iPod®

At the desired wake up time the iPod® starts playback.

It will playback for 1 hour and then shuts off and resets itself for the following day.

You may also activate the Snooze function manually after the alarm sounds by pressing the SNOOZE button.

The iPod® turns off for around 9 minutes and then turns on again.

This operation can be repeated 3 times. After the Fourth time the alarm shuts off until the next day

During the iPod® playback you may also press the ALARM ON / OFF button to stop it immediately. It will reset itself for the following day.

SLEEP OPERATION

You can use the Sleep Timer to shut the system off automatically while you fall asleep to the radio or the iPod player.

Press "POWER" button to turn on the unit.

Press SLEEP button 1, 2, 3, 4 or 5 times to select 15, 30, 45, 60 or 90 minutes of Sleep Timer operation.

The unit will play for amount of time you selected and then shut "OFF" automatically.

To shut the unit "OFF" sooner press the "POWER" button at any time.

APPENDIX

TYPE	UNIVERISAL DOCK No.
3G iPod 10GB 15GB 20GB	1
3G iPod 30GB 40GB	2
iPod mini 4GB 6GB	3
4G & U2 iPod 20GB	4
4G iPod 40GB	5
iPod with color display 20GB 30GB	6
iPod with color display 40GB 60GB	7

TROUBLESHOOTING GUIDE:

Should this unit exhibit a problem, check the following before seeking service.

Symptom	Possible Cause	Solution
General		
No operation	Subject to a severe power surge or electric shock.	Disconnect the adapter cable for few minutes and plug in again
No sound	Volume at minimum level.	Increase Volume level
Radio		
Noise or sound distorted on AM or FM broadcasts.	Station is not tuned properly for AM or FM	Retune the AM or FM broadcast station.
	AM: The bar antenna is not positioned correctly	Reposition the unit until best reception is obtained
AM or FM, no sound	AM or FM mode is not selected	Press RADIO/BAND key to select AM or FM
iPod		
iPod® no sound.	iPod® mode is not selected.	Press PLAY/PAUSE button or FUNCTION button to select IPOD® mode.
	iPod® is installed incorrectly.	Check the connection
	iPod® is in pause or sleep mode	Press PLAY/PAUSE button to start the iPod® playback

THE SPECIFICATION AND EXTERNAL APPEARANCE OF THE SET ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

iPod® is a registered trademark of Apple Computer, Inc.



i.Dream America Inc.
3583 Investment Blvd., Suite 3
Hayward, CA 94545
U.S.A.
Telephone: 1(510)786-9888
Facsimile: 1(510)786-9899
Website: <http://www.idreamusa.net>